


# SUPER

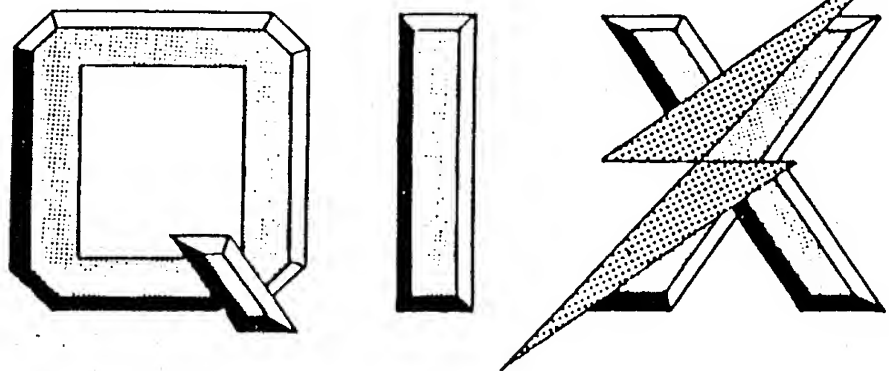

## Service Instructions

（仕 様）

	GAME NAME	
①	ゲーム名称	SUPER QIX
②	CONTROL LEVER S.W	スーパークイックス
③	ボタン S.W	1 (4 方向) 1 (4 WAYS)
④	MONITOR	1
⑤	モニター方向	縦
⑥	PC BOARD	SIZE
		230 × 235 mm
⑦	PC BOARD	供給電圧
	VOLT	+ 5 V 5 A
		+ 12 V 1 A


注) + 5 V 電圧は、PC BOARD のコネクター端子部で設定して下さい。



# TAITO CORPORATION

《コントロールパネルの配線方法》  
(CONTROL PANNEL)

Game PC Board Assy

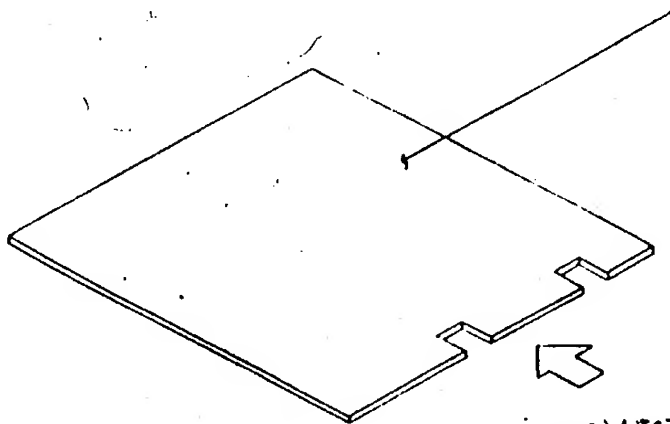

—CONNECTOR—  
コネクター

AMP 28P 583637-1


(アンプリーフコンタクトが必要)

ヒロセ CR7E-56DA-3.96E

注意) コネクターを接続する時は、  
端子部のずれに注意して下さい。

CONTROL PANNEL  
(コントロールパネル)


WAY LEVER  
4 方向レバー

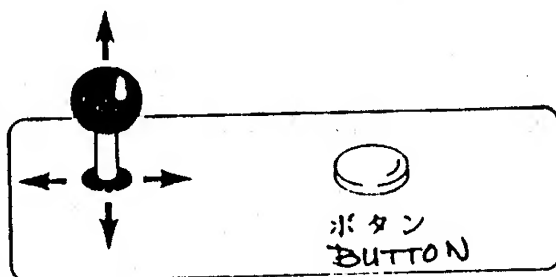

(配 線)

信 号 名	CONNECTOR 端子 N o.	信 号 名	CONNECTOR 端子 N o.
1P UP	18	2P UP	V
1P DOWN	19	2P DOWN	W
1P LEFT	20	2P LEFT	X
1P RIGHT	21	2P RIGHT	Y
1P BUTTON	22	2P BUTTON	Z

(SOLDER SIDE)

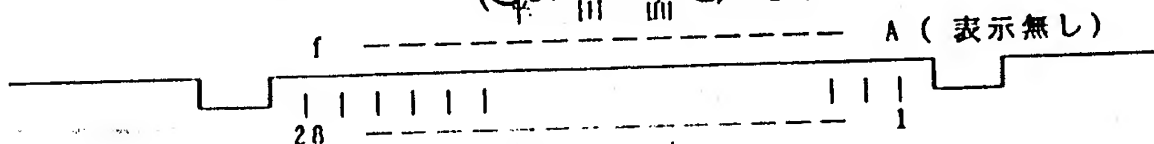


(PART SIDE)

☆その他配線については、「ゲームPCボードの調整」の項参照して下さい。

# (GAME PC BOARD)

ゲームPCボードの図解 (スーパークイックス G20 00809A)

# = SUPER QIX =

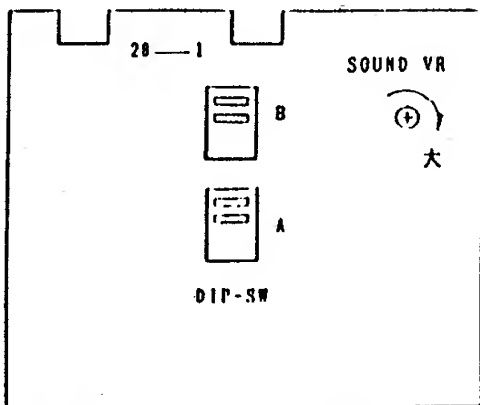

☆本機のゲーム操作は、

4 方向レバー・1ボタンです

注意) **4WAY BUTTON** 1 ea  
Lever

DIP-SWを切り換える時は、一度  
電源をOFFにして下さい。




SOLDER コネクター 端子 14		PART SIDE	
半田面		部品面	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
POST	G	7	POST
(COIN COUNTER 2)	H	8	(COIN COUNTER 1)
	I	9	(COIN LOCKOUT 1)
SPEAKER (-)	J	10	SPEAKER (+)
	K	11	
VIDEO G	L	12	VIDEO R
VIDEO SYNC	M	13	VIDEO B
SERVICE SW	N	14	VIDEO GND
	O	15	(TEST SW)
(COIN 2)	P	16	COIN 1
2P START	Q	17	1P START
2P UP	R	18	1P UP
2P DOWN	S	19	1P DOWN
2P LEFT	T	20	1P LEFT
2P RIGHT	U	21	1P RIGHT
2P BUTTON	V	22	1P BUTTON
	W	23	
	X	24	
	Y	25	
	Z	26	
	a	27	
	b	28	
	c	29	
	d	30	
	e	31	GND
GND	f	32	GND

Monitor V12  
Map 1T

WIRING WAY OF CONTROL PANEL


SUPER QIX

A4

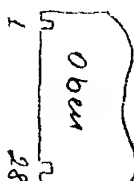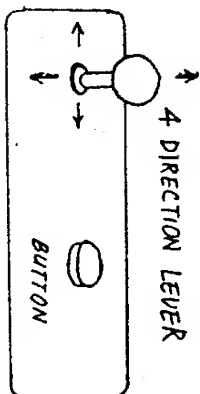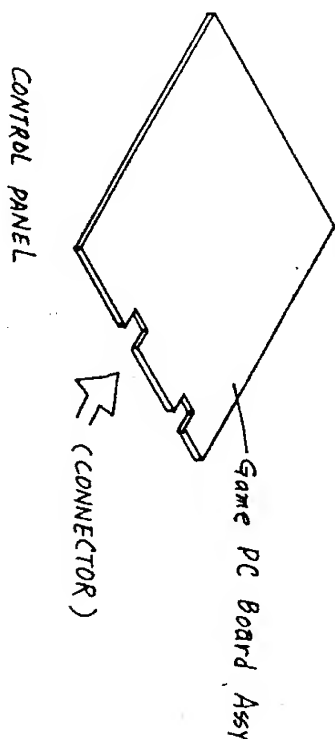


< WIRING >

SIGNAL	CONNECTOR NO.	SIGNAL	CONNECTOR NO.
1P UP	18	2P UP	V
1P DOWN	19	2P DOWN	W
1P LEFT	20	2P LEFT	X
1P RIGHT	21	2P RIGHT	Y
1P BUTTON	22	2P BUTTON	Z

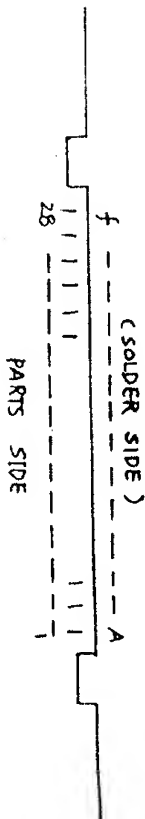

GAME PC BOARD

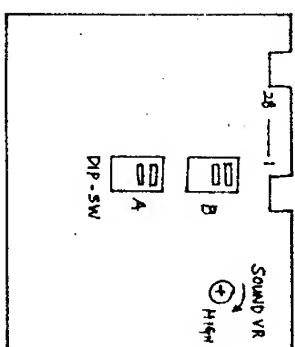

WIRING DIAGRAM

SUPER QIX

SOLDER SIDE	PARTS SIDE
1 GND	1 GND
2 GND	2 GND
3 +5V	3 +5V
4 +5V	4 +5V
5 +12V	5 +12V
6 POST	6 POST
7 +12V	7 +12V
8 POST	8 POST
9 COIN LOCKOUT 1	9 COIN LOCKOUT 1
10 SPEAKER (-)	10 SPEAKER (-)
11 SPEAKER (+)	11 SPEAKER (+)
12 VIDEO GREEN	12 VIDEO GREEN
13 VIDEO BLUE	13 VIDEO BLUE
14 VIDEO RED	14 VIDEO RED
15 VIDEO SYNC	15 VIDEO SYNC
16 SERVICE SW	16 SERVICE SW
17 TEST SW	17 TEST SW
18 COIN START	18 COIN START
19 1P DOWN	19 1P DOWN
20 2P DOWN	20 2P DOWN
21 1P LEFT	21 1P LEFT
22 2P LEFT	22 2P LEFT
23 1P RIGHT	23 1P RIGHT
24 2P RIGHT	24 2P RIGHT
25 1P BUTTON	25 1P BUTTON
26 2P BUTTON	26 2P BUTTON
27 GND	27 GND
28 GND	28 GND

0 DIP SW A

ITEM	CONTENTS	1	2	3	4	5	6	7	8
GAME STYLE	TABLE (UP RIGHT) * (NORMAL) REVERSE (GAME) STOP	OFF	ON	OFF	ON	OFF	ON	OFF	ON
MONITOR	REVERSE (GAME) STOP	OFF	ON	OFF	ON	OFF	ON	OFF	ON
SCREEN STOP	STOP (YES) NO	OFF	ON	OFF	ON	OFF	ON	OFF	ON
CONTINUE GAME	NO (YES) NO	OFF	ON	OFF	ON	OFF	ON	OFF	ON
PLAY PAYMENT	1 COIN 1 PLAY 2 COIN 1 PLAY 3 COIN 1 PLAY 4 COIN 1 PLAY 5 COIN 1 PLAY	OFF	ON	OFF	ON	OFF	ON	OFF	ON
COIN 1	1 COIN 1 PLAY 2 COIN 1 PLAY 3 COIN 1 PLAY 4 COIN 1 PLAY 5 COIN 1 PLAY	OFF	ON	OFF	ON	OFF	ON	OFF	ON
COIN 2	1 COIN 1 PLAY 2 COIN 1 PLAY 3 COIN 1 PLAY 4 COIN 1 PLAY 5 COIN 1 PLAY	OFF	ON	OFF	ON	OFF	ON	OFF	ON

0 DIP SW B

ITEM	CONTENTS	1	2	3	4	5	6	7	8
DIFFICULTY	NORMAL (EASY) HARD VERY HARD	OFF	ON	OFF	ON	OFF	ON	OFF	ON
BONUS	* (8000 / 100,000) 20000 / 50,000 50000 / 100,000 NO BONUS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
NUMBER OF PLAYER	2 (3) (4) (5) (7) (8) (9)	OFF	ON	OFF	ON	OFF	ON	OFF	ON
PLAYER	1 (2) (3) (4) (5) (7) (8) (9)	OFF	ON	OFF	ON	OFF	ON	OFF	ON

( ) : DIP SW SETTING WHEN W SHIP \* FACTORY SETTING

# DIP SW 1

1 2 3 4 5 6 7 8

TABLE OFF  
GAME STYL UP RIGHT ON

MONITOR NORMAL OFF  
INVERSE ON

GAME STOP GAME OFF  
STOP ON

FREE GAME NO ON  
YES OFF

PLAY 1 COIN 1 PLAY OFF OFF  
1 COIN 2 PLAY ON OFF  
COIN 1 2 COIN 1 PLAY ON OFF  
2 COIN 3 PLAY OFF ON  
PLAY 1 COIN 1 PLAY ON ON  
1 COIN 2 PLAY ON ON  
COIN 2 2 COIN 1 PLAY OFF OFF  
2 COIN 3 PLAY ON ON

EIP SW 2 1 2 3 4 5 6 7 8  
DIFFICULT E OFF OFF  
A ON OFF  
C OFF ON  
D ON ON

EGRES 30000..100000 OFF OFF  
20000..50000 ON OFF  
50000..100000 OFF ON  
NO FONUS ON ON

PLAYER 3 OFF OFF  
2 ON OFF  
4 OFF ON  
5 ON ON  
POWER 75% OFF OFF  
70% ON OFF  
80% OFF ON  
85% ON ON



SUPER OIX 87-04 29

WIRING DIAGRAM

SOLDER SIDE

PCBT SIDE

+ 5V  
+ 5V  
- 12 V

+ 5V  
+ 5V  
+ 12V  
SPEAKER

2P START 10 CGEN  
2P UP 11 IP START  
2P DOWN 12 IP UP  
2P LEFT 13 IP DOWN  
2P RIGHT 14 IP LEFT  
2P ECTION 15 IP RIGHT  
16 IP ECTION  
17  
18 GREEN  
19 SYNC  
20  
21 GND  
22 GND

Super  
OIX

WIRING DIAGRAM

SOLDER SIDE

PARTS SIDE

A	GND	1	GND
B	GND	2	GND
C	+5V	3	+5V
D	+5V	4	+5V
E		5	
F	+12V	6	
G	POST	7	POST
H		8	
J	COIN COUNTER 2	8	COIN COUNTER 1
K		9	COIN LOCKOUT 1
L	SPEAKER (-)	10	SPEAKER (+)
M		11	
N	VIDEO G	12	VIDEO R
P	VIDEO SYNC	13	VIDEO B
R	SERVICE SW	14	VIDEO GND
S		15	(TEST SW
T	COIN 2	16	COIN 1
U	2P START	17	1P START
V	2P UP	18	1P UP
W	2P DOWN	19	1P DOWN
X	2P LEFT	20	1P LEFT
Y	2P RIGHT	21	1P RIGHT
Z	2P BUTTON	22	1P BUTTON
a		23	
b		24	
c		25	
d		26	
e	GND	27	GND
f	GND	28	GND

# Super Qx

## Bestückungsmenge

## Lötseite

GND	1	GND
GND	2	GND
GND	3	GND
+5V	4	+5V
+5V	5	+5V
+12V	6	
Lautsprecher ⊕	7	
	8	
	9	
	10	Münzeingang
1 P START	11	2 P START
1 P oben	12	2 P oben
1 P unten	13	2 P unten
1 P links	14	2 P links
1 P rechts	15	2 P rechts
2 P Feuer	16	2 P Feuer
	17	
TV Grün	18	TV Rot
TV Synchron	19	TV Blau
	20	
Lautsprecher ⊖	21	GND
GND	22	GND
	23	
	24	
	25	
	26	
	27	
	28	